

Assembly instructions – SNACK DISPLAY

- 1.) Assembling the frame by putting both perforated back wall frame parts together (no screw connection)




- 2.) Fixing the side panels by screws (5x each side) – put display on its side and align side parts
Important: Starting screwing from the left over the right to the top side!



- 3.) Assembling the metal topper with 2 screws at the front and two screws on the back.
We recommend to take a second person to the hand.

Important: The topper must be installed upright!

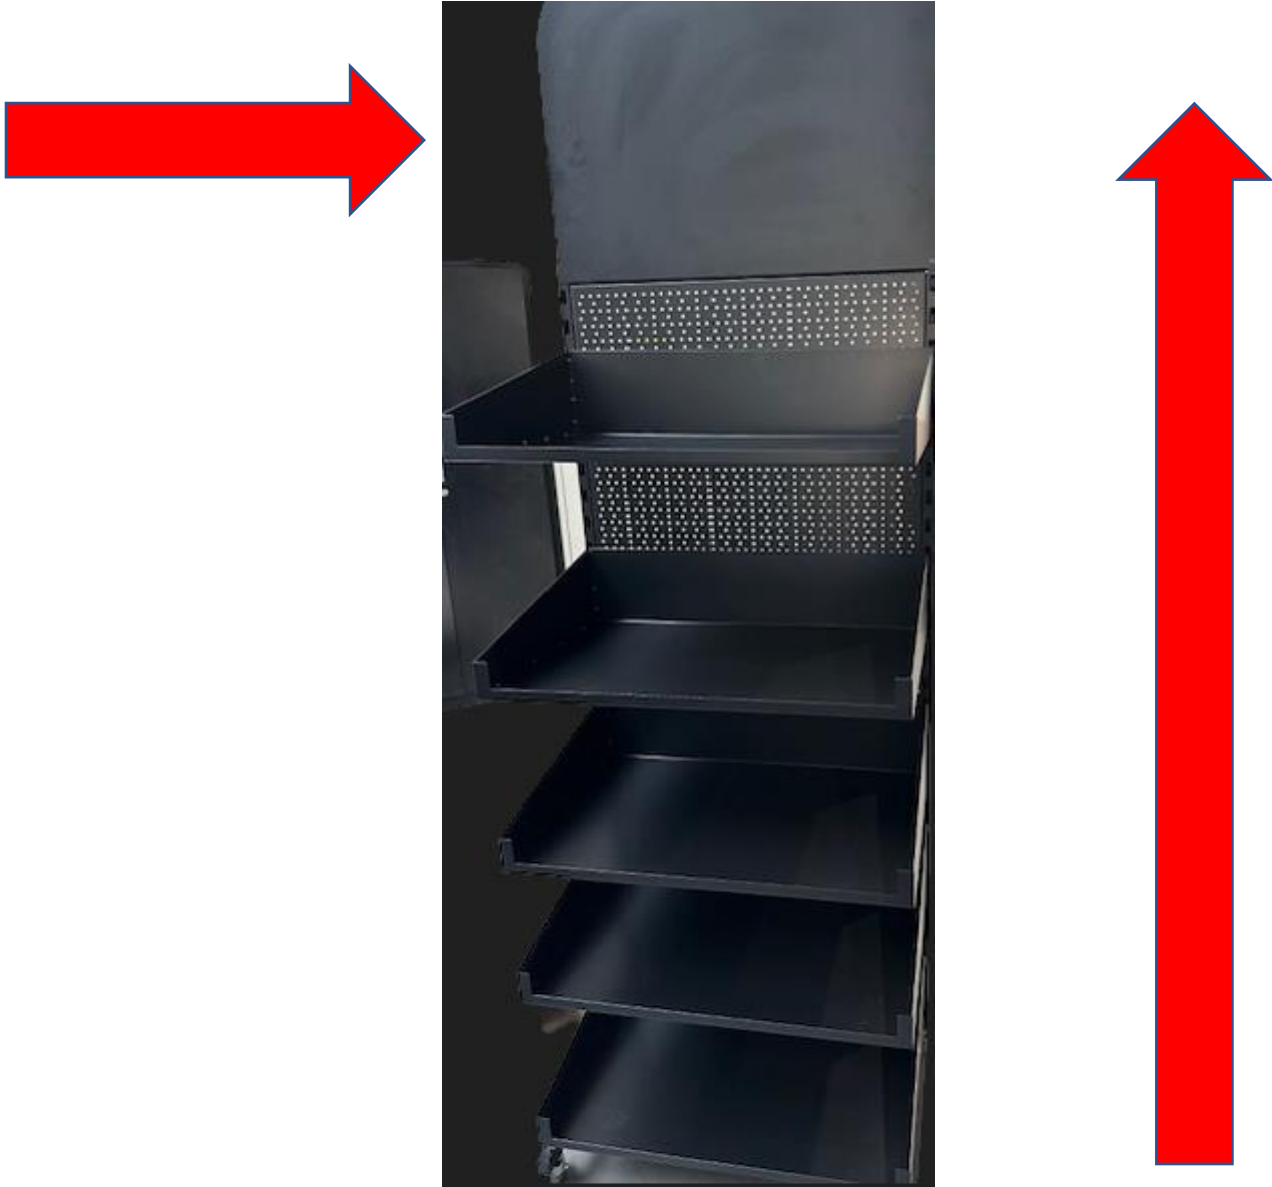

- 4.) Hang in the shelves and hooks according to the current requirements.

